

# Metal Roof Kit Installation Instructions

**Tools required:** regular or locking pliers, needle nose pliers


1. Grip the head of the cotter pin on one wheel with regular or locking pliers and hold firmly.




2. While holding the cotter pin head, use the needle nose pliers, and straighten one leg of the cotter pin to a near straight position.




3. While holding the needle nose pliers, hold the other leg, and bend it to a near straight position.

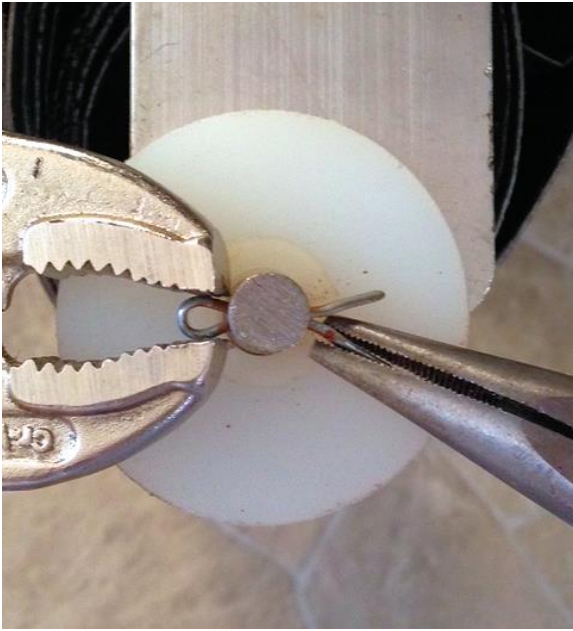

4. Squeeze the tips of the cotter pin together using the needle nose pliers.

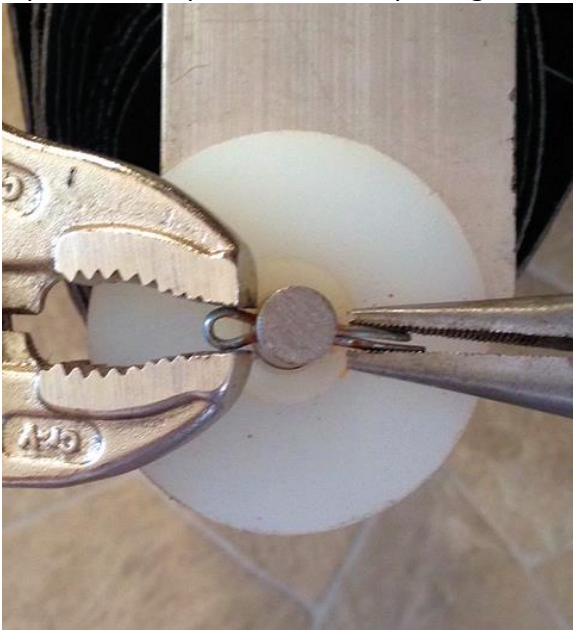

5. Pull the cotter pin out of the hole.

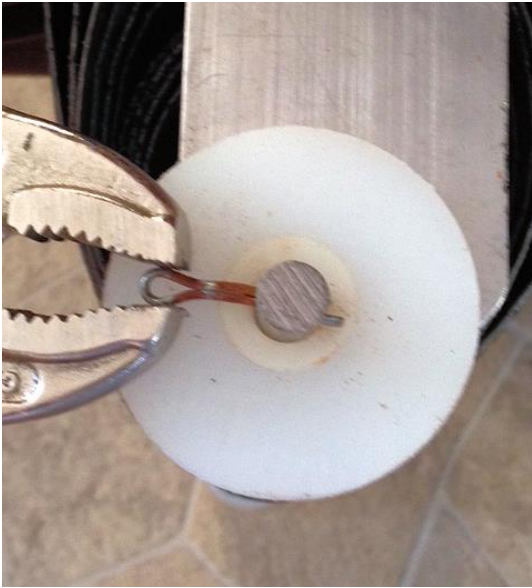

6. Remove the small wheel, then replace with the large wheel and add the washer.




7. Insert the cotter pin into the hole.



8. Grip the head of the cotter pin with regular or locking pliers, then use the needle nose pliers, grip one leg of the cotter pin, and bend.



9. Repeat with the other leg of the cotter pin.

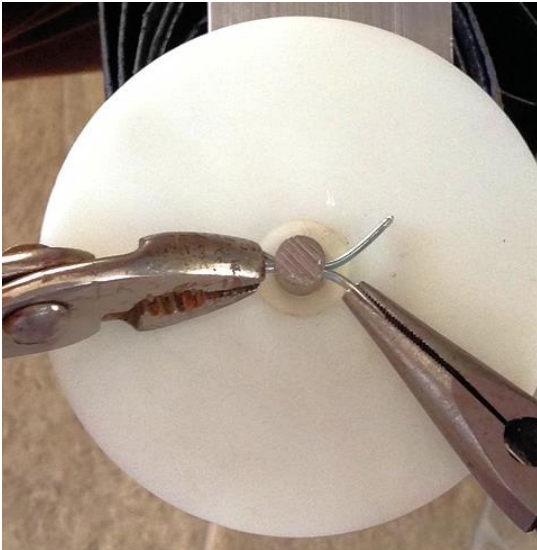

10. Repeat the steps with the other wheel.